



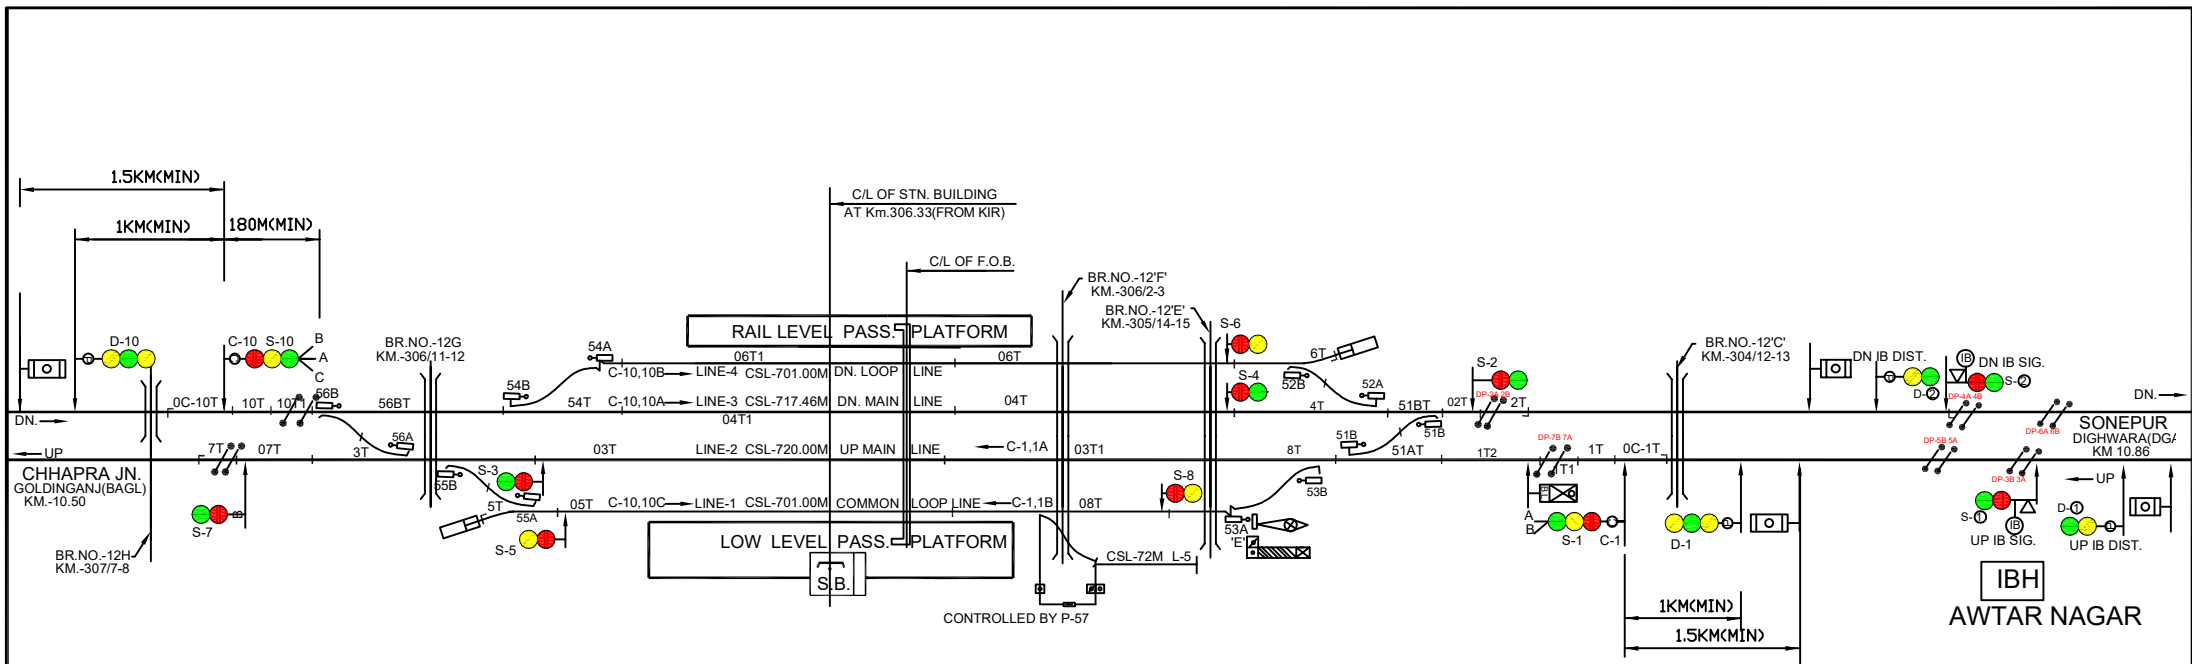

IN PANEL
 MAIN SIGNAL BUTTONS: 1.2.3.4.5.6.7.8.10.
 CALLING 'ON' SIG. BUTTONS: C-1,C-10
 POINT CONTROL BUTTONS: 51.52.53.54.55.56.
 CRANK HANDLE BUTTONS: CH1. CH2. CH3. CH4. CH5. CH6.
 KEY LOCK POINT CONTROL BUTTON: P-57.

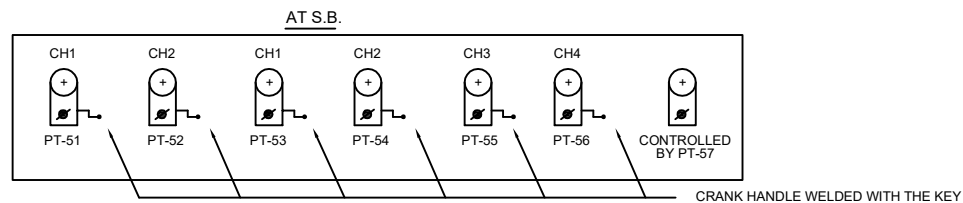

NOTE:-

1. ABSOLUTE BLOCK SYSTEM OF WORKING WITH DIGHWARA & GOLDINGANJ.
2. D/L UFSBI BLOCK INSTRUMENT WORKING WITH GOLDINGANJ & DIGHWARA SITUATED IN PANEL CABIN.
3. TELEPHONE PROVIDED BETWEEN PANEL CABIN & GATE NO.23'C'.
4. ALL ANGLE OF X-ING ARE 1 IN 12 EXCEPT AS MENTIONED IN SIP.
5. CONTROL TELEPHONE PROVIDED IN PANEL CABIN.
6. AWATARNAGAR IBS BETWEEN BAGL-DGA WITH MSDAC.
7. TO SUIT 25 K.V. A.C. TRACTION.

EAST CENTRAL RAILWAY SONPUR DIVISION				STATION WORKING RULE DIAGRAM MACL STD-II(R) CLASS-'B'	BARAGOPAL	SWRD NO.
	DSTE/ECR/SEE	SSE/DRG/SEE	SE/DRG/SEE	TO SUIT SIP NO. ECR/SIP/SEE/125, ALT-VI		