



PANNEL DETAILS:-

MAIN SIGNAL BUTTONS 1,2,3,4,5,6,7,8,9,10,11,12,13,14,15, 16,18,19,20.

CALLING-ON SIGNAL BUTTONS C-1,C-3,C-14, C-20

POINT CONTROLL BUTTONS 51,52,53,54,55,56,57,58,59,60,61,62,63, 64,65,66,67,68,69,70,71,72,73,74,75,76,77.

CRANK HANDLE CONTROLL BUTTONS CH-1,CH-2,CH-3,CH-4,CH-5,CH-6, CH-7,CH-8,CH-9,CH-10,CH-11,CH-12.

SHUNT SIGNAL CONTROLL BUTTONS 103,104,105,106,107,108,109,110,111, 112,113,203,205,206,207,208,209,210, 211,212,213,214,215,216,217.

L-XING GATE CONTROL BUTTON G-31.

STABLING LINE DEMU L. No. 11
STABLING LINE DEMU L. No. 12

RUNNING REPAIR DEMU SHED L. No. 13
RUNNING REPAIR DEMU SHED L. No. 14

HEAVY REPAIR DEMU SHED L. No. 15
HEAVY REPAIR DEMU SHED L. No. 16

LINE No. 18
LINE No. 17

EAST CENTRAL RAILWAY SONPUR DIVISION	DSTE/ECR/SEE	SSE/DRG/SEE	STATION WORKING RULE DIAGRAM MACL STD-II(R) CLASS-'B'	SWRD NO. DY. CSTE/CON/ISPL 2017/2018
			SONPUR	

C/S. S/DSTE/ECR/SEE