


IN PANEL
MAIN SIGNAL BUTTONS: 1.2.3.4.5.6.7.8.10.
CALLING 'ON' SIG. BUTTONS: C-1,C-10
POINT CONTROL BUTTONS: 51.52.53.54.55.56.
GATE CONTROL BUTTONS: G-32
CRANK HANDLE BUTTONS: CH1. CH2. CH3. CH4. CH5. CH6.
KEY LOCK POINT CONTROL BUTTON: P-57.

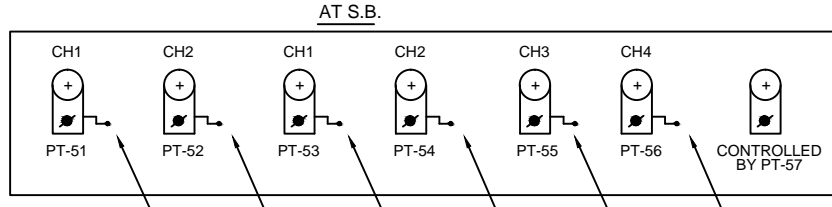

- NOTE:-**
1. ABSOLUTE BLOCK SYSTEM OF WORKING WITH DIGHWARA & GOLDINGANJ.
 2. D/L BLOCK INSTRUMENT WORKING WITH DIGHWARA & GOLDINGANJ SITUATED IN PANEL CABIN.
 3. MAGNETO TELEPHONE PROVIDED BETWEEN PANEL CABIN. GATE NO. 20'C, 21'C, 22'C, 23'C, 24'C, 25'C, 27'C.
 4. ALL ANGLE OF X-ING ARE 1 IN 12 EXCEPT AS MENTIONED IN SIP.
 5. CONTROL TELEPHONE PROVIDED IN PANEL CABIN.
 6. ADDITIONAL BOOM SLIDE LOCKING PROVIDED AT LC GATE NO. 25'C.

EAST CENTRAL RAILWAY SONPUR DIVISION				STATION WORKING RULE DIAGRAM MACL STD-II(R) CLASS-'B' TO SUIT SIP NO. ECR/SIP/SEE/125.	BARAGOPAL	SWRD NO. Sr.DSTE/SEE/2013(RD)/49
	DSTE/ECR/SEE	SSE/DRG/SEE	SE/DRG/SEE			