SUGAULI STATION

सगौली स्टेशन

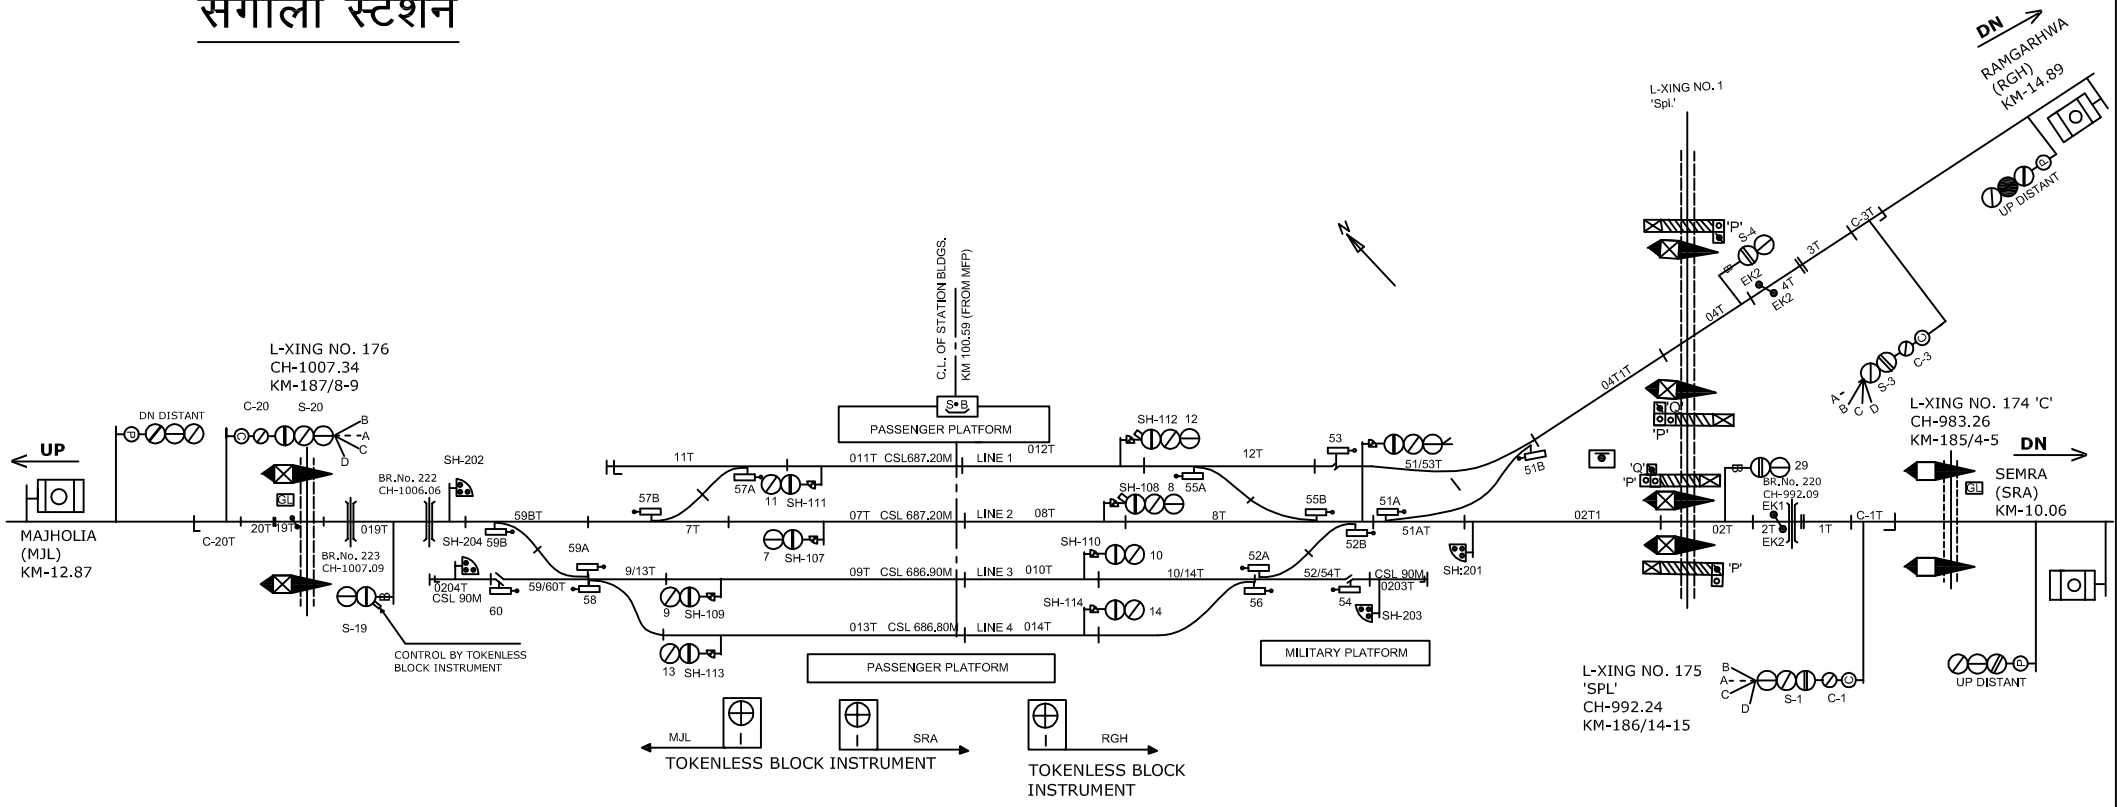

NOTE:-
CONTROL TELEPHONE PROVIDED AT SM' s PANEL AND MAGNETO TELEPHONE CONNECTED BETWEEN SM's PANEL AND L-XING GATE NO. 1'SPL' KM: 28/6-7 & 2'C' 27/7-8 BETWEEN SGL-RGH, LC NO. 172'C' KM:182/7-8, 173'C' KM:184/0-1, 174 KM:185/4-5, 175'SPL' KM:186/3-4 BETWEEN SRA-SGL , 176'B' KM:187/8-9, 177'C' KM:189/11-12, 178'C' KM:190/15-19/1 & 179'C' KM: 192/3-4 BETWEEN SGL - MJL.

CLASS OF STATION : B
STD OF SIG & INTERLOCKING: STD-II Ⓡ

EAST CENTRAL RAILWAY SAMASTIPUR DIVISION				STATION WORKING RULE DIAGRAM MACL, STD-III Ⓡ, CLASS 'B'	SUGAULI	SWRD NO.- Sr.DSTE/SPJ 2015(RD) / 04
	Sr.DSTE/SPJ	DSTE/W/SPJ	SSE/SIG/SPJ	TO SUIT SIP NO. ECR/SIP/SPJ/337/2015 ALT-I		