


FATUHA (FUT)

- NOTE-**
1. ABSOLUTE BLOCK SYSTEM OF WORKING WITH KHUSROPUR, BANKAGHAT AND DANIYAWAN.
 2. BLOCK PROOVING AXLE COUNTER PROVIDED BETWEEN FATUHA-BANKAGHAT, FATUHA-KHUSROPUR & FATUHA-DANIYAWAN AND INTERLOCKED WITH BLOCK INSTRUMENT.
 3. ANGLE OF CROSSING ARE 1 IN 12 EXCEPT AS MENTIONED IN SIP.
 4. CONTROL TELEPHONE PROVIDED AT SM'S OFFICE.
 5. MAGNETO TELEPHONE CONNECTED BETWEEN PANEL ROOM AND L-XING No. 1 'B' AT KM 522.265 AND CRANK HANDLE LOCATIONS.
 6. LED SIGNAL LAMPS TO BE USED.
 7. UFSBI WITH BLOCK PANEL WORKING WITH BANKAGHAT, KHUSROPUR & DANIYAWAN.
 8. SLIDING BOOM PROVIDED AT LC GATE No. 1'B' AT KM 522.265.

PANEL DETAILS
 MAIN SIGNAL BUTTONS:- 1,2,3,4,6,7,8,9,10,11,12,13,14,19,20,21,22,23,24,27,28,29,30,31,32,36,38,39,40.
 CALLING-ON SIGNAL BUTTONS:- C-1, C-3, C-27, C-36, C-38, C-40.
 SHUNT SIGNAL BUTTONS:- 106, 107, 108, 109, 110, 111, 112, 113, 114, 119, 120, 121, 122, 123, 124, 129, 131, 136, 138, 201, 202, 203, 204, 205, 206, 207, 208, 210, 212, 214.
 POINTS BUTTONS:- 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84.
 CRANK HANDLE BUTTONS:- CH1, CH2, CH3, CH4, CH5, CH6, CH7, CH8, CH9, CH10, CH11, CH12, CH13, CH14, CH15, CH16, CH17, CH18, CH19, CH20, CH21, CH22, CH23, CH24, CH25, CH26, CH27, CH28.
 GATE CONTROL BUTTONS:- 31.

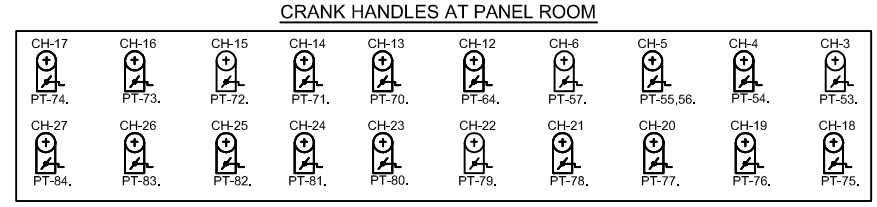

EAST CENTRAL RAILWAY			Lahmad	PANEL SINGALLING PLAN	FATUHA JN. (FUT)	SR. NO. ML-23
DANAPUR DIVISION				MACL, STD-II(R), CLASS-'B'		ECR/SIP/DNR/101/2012
	SR.DSTE/ECR/DNR	ASTE/ECR/DNR	SSE/DRG/DNR			ALT-IV